

ABSOLUTE OZONE® ATLAS 60 (20 PSI)

60G/H AIR-COOLED OZONE GENERATOR



Absolute Ozone Generators are a quantum leap in ozone technology. Due to very high precision design, utilizing micro-fluidic platform technology and excellent durability, all air-cooled Absolute Ozone | ozone generators reliably deliver ultra pure, high concentration ozone for a wide variety of special applications. The performance is unequalled in the industry with the capability of producing high concentration ozone up to 12% by weight - guaranteed.

SPECIFICATIONS

ATLAS 60

Ozone (O ₃) Production:	60 g/h
Working Pressure:	20 PSIG (Low Pressure)
Concentration:	12% by weight Guaranteed
Feed Gas (O ₂) Flow Rate:	0.1-14 SLPM


Control Power Requirements:	120 V ~ +/-10%, 50/60 Hz, Single Phase, 8.0 A 220 V ~ +/-10%, 50/60 Hz, Single Phase, 6.0 A
-----------------------------	--

Physical Connections:	O ₂ Inlet: 0.25" SS316 Comp. Swagelok Type Connector O ₃ Outlet: 0.25" SS316 Comp. Swagelok Type Connector
-----------------------	---

NEW FEATURES

SMARTEST OZONE GENERATOR IN THE WORLD

Introducing the first of its kind **SMART ON-BOARD CONTROL & DIAGNOSTICS SYSTEM** included on all Absolute Ozone | ozone generators. This new technology delivers prompts on the display which allows the operator the ease and convenience to monitor most operating parameters including temperature, pressure, voltage and more all on the convenience of a touch-screen 5" LCD display. Moreover, the control system is designed to maintain constant ozone production during voltage fluctuations (within range), adjust power automatically to accommodate for different or fluctuating gas pressures, automatically lower power if operating in hot ambient temperature and more!

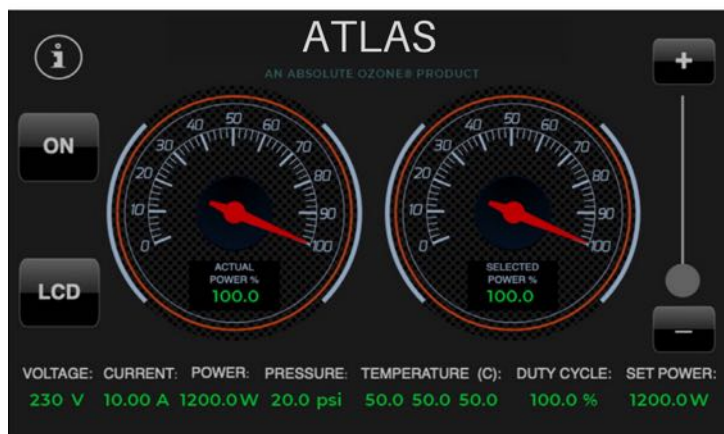

The LCD screen displays the following parameters:

- Selected power setting %, so you will be able to see on the screen power selected by the remote control or slider
- Actual system power (% & Watt)
- The system voltage (V)
- The System Current (Amp)
- Temperature inside the ozone cell
- The LCD screen will allow by touch to switch the generator on and off and to adjust desire power by moving slider on the screen with your finger up or down

ON-BOARD LIVE AUTOMATIC DIAGNOSTICS

In a case when incorrect operating parameters are applied to an ozone generator the unit is switched off by the control system and LCD screen will indicate which of parameters caused the generator shutdown.

In a safety shutdown mode the generator will be constantly monitoring operating parameters and the moment they are corrected the generator will restart automatically, without any assistance.

WARNING!

OZONE CELL TEMPERATURE TOO HIGH

CHECK AMBIENT TEMPERATURE AND/OR AIR FLOW THROUGH OZONE GENERATOR FOR OBSTRUCTIONS

WARNING!

OZONE CELL PRESSURE TOO LOW

CORRECT THE PROBLEM BY REMOVING POSSIBLE RESTRICTIONS ON O2 LINE AND ADJUST O3 FLOW ACCORDING TO PERFORMANCE CHART

WARNING!

OZONE CELL PRESSURE TOO HIGH

ADJUST PRESSURE REGULATOR TO SPECIFIED WORKING PRESSURE TO CORRECT PROBLEM

WARNING!

OZONE CELL CONTAMINATION

PLEASE ELIMINATE SOURCE OF CONTAMINATION AND CONTACT SERVICE FOR FURTHER INSTRUCTIONS

WARNING!

SUPPLY VOLTAGE TOO LOW

CHECK WIRING AND SUPPLY VOLTAGE AND CORRECT BEFORE TURNING ON OZONE GENERATOR AGAIN

WARNING!

SYSTEM COMMUNICATION PROBLEM

OZONE GENERATOR WILL AUTO-RESTART IF PROBLEM PERSISTS PLEASE CONTACT SERVICE IMMEDIATELY

WARNING!

OZONE SENSOR PROBLEM

OZONE GENERATOR WILL AUTO-RESTART IF PROBLEM PERSISTS PLEASE CONTACT SERVICE IMMEDIATELY

WARNING!

SUPPLY VOLTAGE TOO HIGH

CHECK WIRING AND SUPPLY VOLTAGE AND CORRECT BEFORE TURNING ON OZONE GENERATOR AGAIN

WARNING!

INCORRECT REMOTE CONTROL VOLTAGE

PLEASE CORRECT R/C WIRING AND OZONE GENERATOR WILL AUTO-RESTART, SEE MANUAL FOR MORE INFO

Absolute Ozone | Ozone Generators produce ozone at unsurpassed by competitors high concentration ozone. Laws of physics dictate that the maximum amount of ozone dissolved in water is proportional to the ozone concentration produced by the ozone generator. Therefore, an ATLAS 30 (30g/h) ozone generator will dissolve more ozone in water and provide higher disinfection rates in comparison to most 60g/h ozone generator available on the market today. This high efficiency and high concentration ozone will save the user as much as \$12,000 on the price of the ozone system even for a small scale system.

To see more details regarding calculations, please visit www.Ozone-Generator.com

Oxygen Flow	Gas Press. (PSIG)	Power (%)	Ozone Conc. (g/Nm ³)	Ozone Prod. (G/H)	Ozone Conc. (%w/w)
1.00	20	70%	218	11.6	14.52
12.0	20	100%	92	60.4	6.3

COMPACT & MODULAR OZONE GENERATORS

DESIGN

Absolute Ozone | Ozone Generators have modular design and come standard with special universal flanges and tabs that allow the user not only to mount the ozone generator in any position but to stack them and connect multiple ozone generators in stacks to achieve any ozone concentration required or in to expand the ozone system in the future if necessary to total ozone production up to 5kg/h or higher.



All parts and components used in Absolute Ozone | Ozone generators have been designed to work for 15-20 years and do not require any repairs or replacements, saving substantial amount of money over that period of time and offering the lowest TCO (Total Cost of Ownership) in the industry. Leak proof construction tested at up to 150 PSIG, corrosion resistant stainless steel or aluminum enclosure, highest quality components and materials used, further enhance reliability. Result: No downtime, No hidden costs.

5-YEAR WARRANTY - THE ONLY PERFORMANCE GUARANTEE IN THE INDUSTRY

5 Years Parts and Labour Warranty + The Only Performance Guarantee in the Industry*. We are confident that Absolute Ozone generators will provide great performance and reliability for many years of service saving you money on repairs and downtime.

'Right on Spec Warranty' – "If in an unlikely event a product that we send you doesn't meet or exceed our published specifications, we'll send you one that does, or refund your money if we can't.

ULTRA PERFORMANCE WITH LOW OXYGEN DEMAND



The low-pressure version of the Atlas 60 only required two standard oxygen generators, such as an Onyx Ultra (10 LPM at 20 PSIG each). Eliminating the need for a more sophisticated oxygen generator and air compressor. Atlas 60 low pressure is ideal when high pressure is not a process requirement

- 3M
- LEVI JEANS
- ABERCROMBIE & FITCH
- NASA
- GE
- OXFORD INSTRUMENTS
- HARVARD UNIVERISTY
- STANFORD UNIVERSITY
- WESTERN UNIVERSITY
- JOHNSON & JOHNSON
- US ARMY
- US NAVY
- USA GOVERNEMENT
- PEPSI
- COCA COLA
- BOEING
- UNIVERSITY OF SYDNEY
- HOWARD HUGHES MEDICAL INSTITUTE
- CANADIAN TIRE
- ENBRIDGE
- GOVERNMENT OF CANADA
- ALBERTA GOVERNMENT
- OAK RIDGE NATIONAL LABAROTORY
- LAM RESEARCH
- INNOVOTECH
- SQWINCHER
- CAITAC GROUP AGVENTURES
- OREGON STATE UNIVERSITY
- HALEY & ALDRICH
- VERTEX
- BERGEN FRUIT AND NUT COMPANY
- JPL (JET PROPULSION LABORATORY)
- ARCTIC CHILLER
- PARKER
- BASF - THE CHEMICAL COMPANY
- INDIANA INSTITUTE OF TECHNOLOGY
- ACKLANDS GRAINGER
- CORAL WORLD - OCEAN PARK
- WEM - WORLD WATER PARK
- GOLD'N PLUMP
- MACNEIL
- Mandalay Resort
- TRANSALTA GENERATION COMPANY
- BIOX
- SNC LAVALIN

GET IN TOUCH

Absolute Ozone began operations in 1985 and since then has been become an international leader in ozone generating technology and development, supplying ozone generators to over 100 countries worldwide. For the last 30 years, we have been focusing our efforts on making all projects of our clients successful and on providing the most reliable, economic and effective ozone generators to them.

That is why we are offering a unique opportunity to all of our customers not only by providing verifiably the most advanced, effective and economical Absolute Ozone generators to them, but actually by ensuring that the equipment we provide will be effective and will make their project successful, as well as it will save them a lot of money over the time that the equipment will be working for them. Most importantly our technical assistance to our customers is complimentary, unlimited and is absolutely free of charge.

Our assistance to our clients for over the past two decades not only provided them with most reliable and effective working ozone systems, but provided tremendous saving on operating expenses to them, as Absolute Ozone generators do not require any service repairs or maintenance first 20 years of use, when installed and used correctly.

CALL US TODAY AND LET'S DISCUSS YOUR UPCOMING OR CURRENT PROJECT



EXCLUSIVE DISTRIBUTOR

111 North Bridge Road ♦ #08-27 Peninsula Plaza ♦ Singapore 179098
(65) 6836 9665 ♦ Sales@promedusa.us ♦ www.promedusa.us