


PROMEDUSA MODEL UV SG15,000 ULTRAMAX PRO

**ADJUSTABLE OZONE OUTPUT:
5gm/hr - 10gm/hr - 15gm/hr**

**THE HIGHEST OUTPUT UV OZONE GENERATOR
TO SANITISE, AND DEODORISE
THE AIR IN VERY LARGE
NON-OCCUPIED SPACES**

Exclusively manufactured in Canada only
for ProMedUSA Pte Ltd

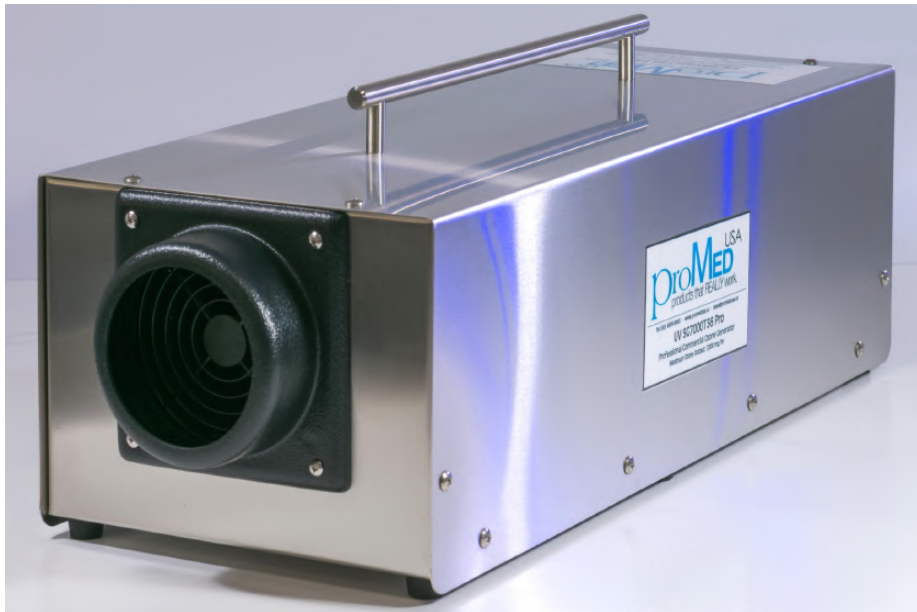

- **OZONE OUTPUT: MAXIMUM OF 15,000 MG/HR (15 GM/HR)**
- **ADJUSTABLE OUTPUT: 3 SELECTABLE OZONE OUTPUT LEVELS USING REAR SWITCHES (5,000, 10,000 and 15,000 mg/hr)**
- **DIMENSIONS: 60 CM X 23 CM X 18 CM; WEIGHT: 13 KG**
- **CONSTRUCTION: 18 GAUGE 316 BRUSHED STAINLESS STEEL**
- **UNIT WARRANTY: 6 YEAR INTERNATIONAL WARRANTY**
- **TUBE WARRANTY: 2 YEAR WARRANTY ON OUR MADE IN USA TUBES**
- **CAPABILITY: FRESHEN UP TO 1,800 M³ SPACE IN 10 MINUTES
FRESHEN UP TO 70,000 M³ SPACE IN 1-2 HOURS**

Technical Details

OVERVIEW:

The ProMedUSA Model UV-SG15,000 ULTRAMAX PRO Ozone Generator is designed for use as a very high output, commercial odour removal and sanitisation tool. It is ideal for use in Bin Centres and Grease Trap Rooms, Hotel & Property Engineering Renovation Odour Removal, Mould Remediation, AHU's and HVAC's, Kitchen Exhaust Duct odour and Grease removal, Hospitals, Clinics, Medical Centres, Laboratories, Offices for air sanitization. Use in NON-OCCUPIED spaces only.

USES:

Quickly destroy odours, mould and mildew spores, tobacco and food smells, body odours, perfume), deodorise and freshen the air from hotel rooms, clinics, residences, restaurants, public areas, commercial kitchens, bin centres, toilets, etc.

GENERATION METHOD:

High Output, High Efficiency, Ultra Long Life (2+ Years) American Made UV Tubes. Our UV Tubes are made exclusively for ProMedUSA

OZONE OUTPUT: 15,000 mg/hr, adjustable with 3 switches on the rear panel.

TREATMENT AREA:

The UV SG15,000 PRO can quickly freshen a 1,800 M³ space in about 10 minutes; a 30,000 M³ space in about an hour; and a 70,000 M³ space in about 2 hours or less

DIMENSIONS:

61 cm long X 23 cm wide X 18 cm high; Weight is 13 kg

FEATURES:

The UV SG15,000 ULTRAMAX Pro comes standard with a 9 position LED Electronic Timer (10 min, 30 min, 1,2,4,8,12,24 and 36 hours, 3 rear switches to adjust the ozone level (5,000 – 10,000 – 15,000mg/hr

CONSTRUCTION:

The exterior case is beautiful brushed, rust proof, 18 gauge surgical grade stainless steel. Each UV SG-15,000 PRO is built and designed to be virtually indestructible and last for years.

ELECTRICAL:

110-120VAC 60Hz, or 220-240V 50Hz, 650 watts maximum

6 YEAR WARRANTY:

The UV SG15,000 PRO has an international **6 Year Warranty** against all defects in materials and workmanship. Our UV Tubes are guaranteed for **2 full years**.

UV TUBE LIFE EXPECTANCY :

Usually every 2 years or 15,000 hours.

MAINTENANCE:

Easy, Simple, and Minimal. Just replace the rear filter when dirty (usually every 3 months or so) and throw it away. It takes just 1 minute and you can do it yourself.

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA