


UV SG3000 SERIES PROFESSIONAL PORTABLE OZONE GENERATOR

Professional UV Odour Removal and Air + Surface Sanitisation Unit For Non-Occupied Spaces

Exclusively manufactured in Canada only for
ProMedUSA Pte Ltd

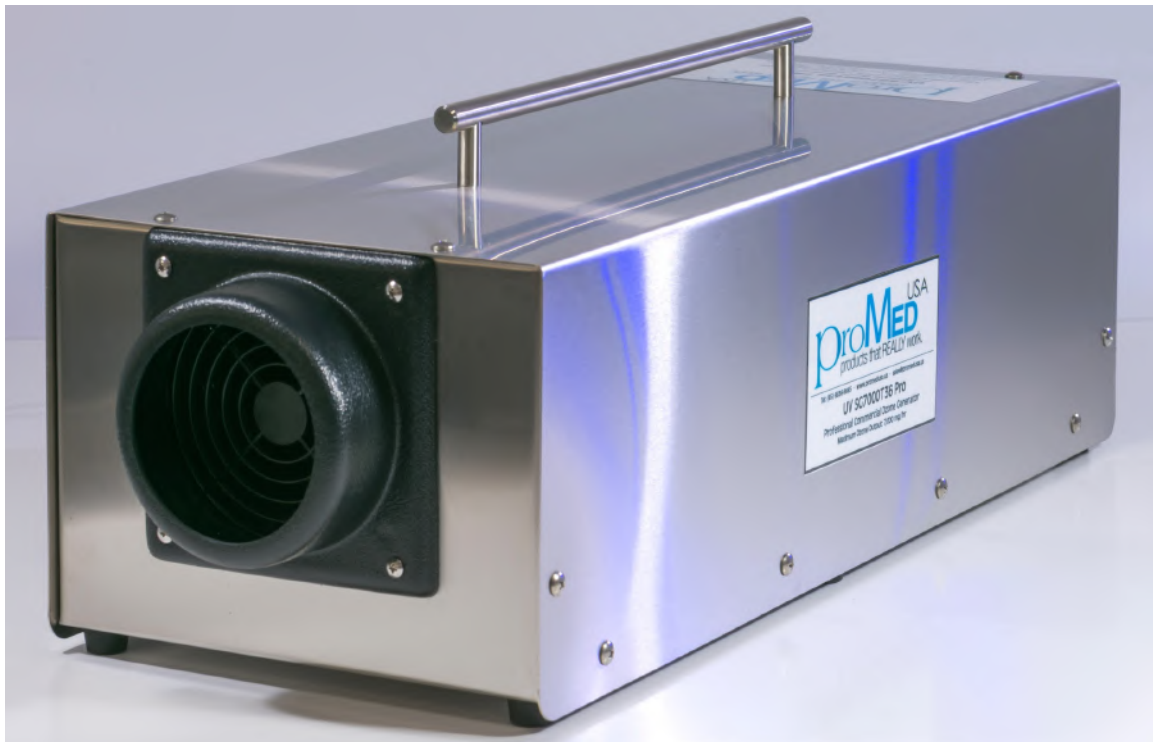

- **OZONE OUTPUT:** 600 to 3000 MG/HR (ADJUSTABLE WITH REAR SWITCHES IN 5 OZONE LEVELS)
- **DIMENSIONS:** 60 CM X 23 CM X 18 CM; **WEIGHT:** 8.0 KG
- **POWER:** 220-240VAC 50Hz, 2 Amp
- **CONSTRUCTION:** 18 GAUGE BRUSHED 316 STAINLESS STEEL
- **UNIT WARRANTY:** 6 YEAR INTERNATIONAL WARRANTY
- **TUBE WARRANTY:** 2 YEAR WARRANTY ON THE MADE IN USA UV TUBES
- **PERFORMANCE:** EASILY REMOVE ODOURS IN A 350 M³ SPACE IN JUST 10-15 MINUTES; 11,100 M³ SPACE IN ABOUT 1-2 HOURS

UV SG3000 V15-0525

Technical Details

OVERVIEW:

The ProMedUSA Model UV-SG3000PRO series Ozone Generators are designed for use as a very high output, commercial portable, odour removal and sanitisation tool. They are ideal for use in Bin Centres and Grease Trap Rooms, Ballrooms, Hotel & Property Engineering Renovation Odour Removal, Mould Remediation, AHU's and HVAC's, Kitchen Exhaust Duct odour and Grease removal, Hospitals, Clinics, Medical Centres, Laboratories, Classrooms, Offices for air sanitization (ozone kills germs and bacteria) and for general air freshening in non-occupied spaces.

USES:

Serious Odour, mould and VOC removal in large spaces; large area deodorisation and air purification.

GENERATION METHOD:

High Output, High Efficiency, Ultra Long Life (2+ Years) American Made UV Tubes. Our UV Tubes are made exclusively for ProMedUSA

OZONE OUTPUT:

The maximum ozone output is 3,000 mg/hr. The Ozone output level is adjustable in 5 levels from 600 mg/hr to 3,000 mg/hr.

TREATMENT AREA:

About 350 M3 in 10-15 minutes, 11,000+ M3 in 1-2 hours

DIMENSIONS:

60 cm long X 23 cm wide X 18 cm high; Weight is 8 kg

FEATURES:

Each UV SG3000 series unit comes standard with a 9 position LED Electronic Timer (10 min, 30 min, 1,2,4,8,12,18,36 hours, and 3 rear switches to adjust the ozone output level.

CONSTRUCTION:

The exterior case is beautiful brushed, rust proof, 18 gauge surgical grade stainless steel. Each UV SG-3000T36 PRO is built and designed to be virtually indestructible and last for years.

ELECTRICAL:

110-120VAC 60Hz, or 220-240V 50Hz, 225 watts

6 YEAR WARRANTY:

The UV SG3000 Series has an international **6 Year Warranty** against all defects in materials and workmanship. Our UV Tubes are guaranteed for **2 full years**.

UV TUBE LIFE EXPECTANCY AND COST:

Generally, 2 to 4 Years. Replacement UV Tube cost is only \$225.00 ea.

MAINTENANCE:

Easy, Simple, and Minimal. Just replace the rear filter when dirty (usually every 3 months or so) and throw it away. It takes just 1 minute and you can do it yourself.

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA