


UV SG4200 SERIES PROFESSIONAL PORTABLE OZONE GENERATOR

**For Non-Occupied Spaces
Professional UV Odour Removal
and Air + Surface Sanitisation Unit
Adjustable Ozone Output 600mg
to 4,200 mg/hr (4.2Gm/hr)**

**Exclusively manufactured in Canada for
only for ProMedUSA Pte Ltd**

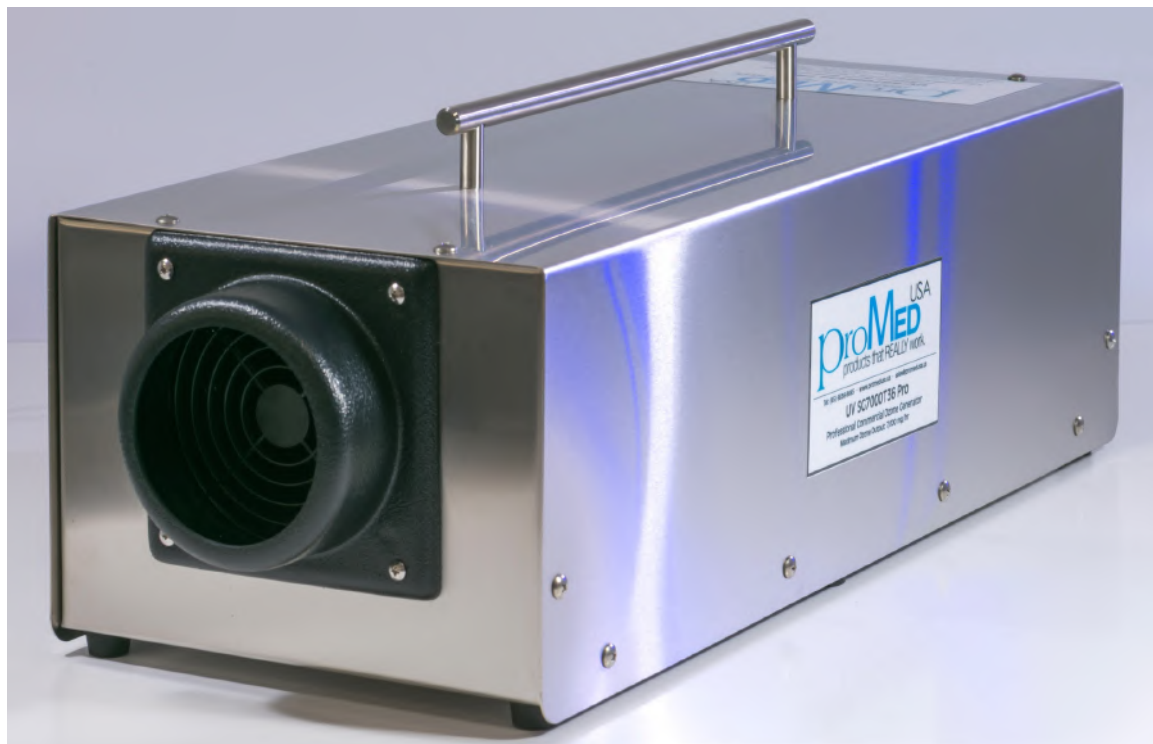

- **OZONE OUTPUT:** 600 to 4200 MG/HR (ADJUSTABLE WITH REAR SWITCHES IN 6 OZONE LEVELS)
- **DIMENSIONS:** 60 CM X 23 CM X 18 CM; **WEIGHT:** 9.5 KG
- **POWER:** 220-240VAC 50Hz, 4 Amp
- **CONSTRUCTION:** 18 GAUGE BRUSHED 316 STAINLESS STEEL
- **UNIT WARRANTY:** 6 YEAR INTERNATIONAL WARRANTY
- **TUBE WARRANTY:** 2 YEAR WARRANTY ON THE MADE IN USA UV TUBES
- **PERFORMANCE:** EASILY REMOVE ODOURS IN A 500 M³ SPACE IN JUST 10-15 MINUTES; 20,000 M³ SPACE IN ABOUT 1-2 HOURS

Technical Details

OVERVIEW:

The ProMedUSA Model UV-SG4200 PRO Ozone Generator is designed for use as a very high output, commercial portable, odour removal and deodorisation tool. It is ideal for use in Bin Centres and Grease Trap Rooms, Hotel & Property Engineering Renovation Odour Removal, Mould Remediation, AHU's and HVAC's, Kitchen Exhaust Duct odour and Grease removal, Hospitals, Clinics, Medical Centres, Laboratories, Classrooms, Offices for air sanitization in non-occupied rooms.

USES:

Quickly destroy odours, mould and mildew spores, tobacco odours, foods and body odours, perfume), sanitise and freshen the air from hotel rooms, clinics, residences, restaurants, public areas, automobiles, toilets, commercial kitchens, chillers, etc.

GENERATION METHOD:

High Output, High Efficiency, Ultra Long Life (2+ Years) American Made UV Tubes. Our UV Tubes are made exclusively for ProMedUSA

OZONE OUTPUT: 4,200 mg/hr adjustable with 3 switches on the rear panel.

TREATMENT AREA:

The UV SG4200 PRO can quickly freshen a 500 M³ space in less than 10 minutes; a 10,000 M³ space in about an hour; and a 20,000 M³ space in about 2 hours or less

DIMENSIONS:

61 cm long X 23 cm wide X 18 cm high; Weight is 9.5 kg

FEATURES:

The UV SG4200 MiniPro comes standard with a 9 position LED Electronic Timer (10 min, 30 min, 1,2,4,8,12,24 and 36 hours and 3 rear switches to adjust the ozone level from 600mg to 4.2g/hr

CONSTRUCTION:

The exterior case is beautiful brushed, rust proof, 18 gauge surgical grade stainless steel. Each UV SG-3000/4200/7000 and 15,000 is built and designed to be virtually indestructible and last for years.

ELECTRICAL:

110-120VAC 60Hz, or 220-240V 50Hz, 350 watts maximum

6 YEAR WARRANTY:

The UV SG4200 Pro has an international **6 Year Warranty** against all defects in materials and workmanship. Our UV Tubes are guaranteed for **2 full years**.

UV TUBE LIFE EXPECTANCY AND COST:

Generally, 2 to 4 Years.

MAINTENANCE:

Easy, Simple, and Minimal. Just replace the rear filter when dirty (usually every 3 months or so) and throw it away. It takes just 1 minute and you can do it yourself.

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA