


ProMedUSA Model UV SG650AT PRO

**FOR NON-OCCUPIED SPACES
PROFESSIONAL UV ODOUR REMOVAL, AIR
AND SURFACE SANITISING UNIT WITH
FULLY 100% ADJUSTABLE OUTPUT**

**EXCLUSIVELY MANUFACTURED IN CANADA
ONLY FOR PROMEDUSA**

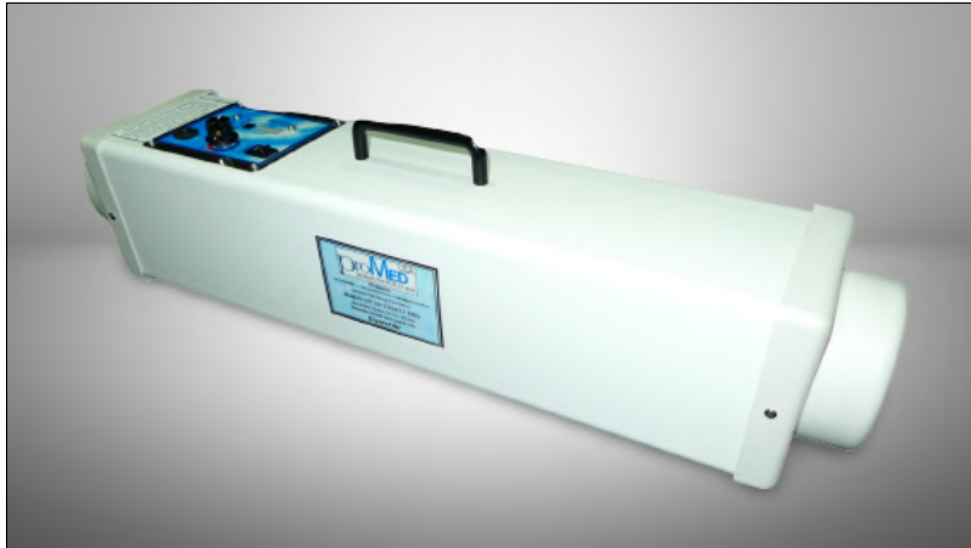

- **OZONE OUTPUT (ACTIVATED OXYGEN): CONTINUOUSLY VARIABLE FROM 10 - 600 MG/HR; PLUS 9 POSITION ELECTRONIC TIMER**
- **DIMENSIONS: 63 CM X 13 CM X 16 CM; WEIGHT: JUST 4.7 KG**
- **6 YEAR WARRANTY ON THE OZONE GENERATOR**
- **2 YEAR WARRANTY ON THE MADE IN USA UV TUBES**
- **TREATMENT AREA: DEPENDING UPON MODEL - FRESHEN THE AIR IN A 140 M³ SPACE IN ABOUT 10 MINUTES**
- **USES: THE UV SG650AT's ADJUSTABLE FEATURE ALLOWS YOU TO ADJUST THE OZONE LEVEL TO PRECISELY WHAT'S NEEDED TO GENTLY REMOVE ODOURS AND VOC's**

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA

Technical Details

OVERVIEW:

The ProMedUSA UV SG650AT36 PRO Ozone Generator is designed for use as a high output, commercial portable odour removal and sanitisation tool in non occupied spaces. They are ideal for use in Bin Centres and Grease Trap Rooms, Hotel & Property Engineering Renovation Odour Removal, Mould Remediation, Hospitals, Clinics, Medical Centres, Laboratories, Classrooms, Offices for air sanitization (ozone kills germs, bacteria and for general air purification

USES:

These Adjustable Output units are designed for use in non-occupied spaces for Odour, Mould and VOC removal in large spaces; large area sanitisation and air purification.

GENERATION METHOD:

High Output, High Efficiency, Ultra Long Life (2+ Years) American Made UV Tubes. Our UV Tubes are made exclusively for ProMedUSA

OZONE OUTPUT:

The UV SG650AT: Continuously adjustable from 10 to 600 mg/hr

TREATMENT AREA:

Up to 140 M³ in 10-15 minutes, 400 – 500 M³ in about 1-2 hours.

DIMENSIONS:

62 cm long X 13 cm wide X 16 cm high; Weight is 4.7 kg

FEATURES:

The UV 650AT36 unit comes standard with a 9 position LED Electronic Timer (10 min, 30 min, 1,2,4,8,12,18,36 hours, and a control panel knob to adjust the ozone output level.

CONSTRUCTION:

The exterior case is 4mm thick, rust proof and scratch proof, easy to clean white PVC. Inside are 2 shock mounted, 18 gauge surgical grade stainless steel inner chassis. The UV SG650AT is designed to be virtually indestructible and will look clean and fresh for years.

ELECTRICAL:

110-120VAC 60Hz, or 220-240V 50Hz, 50 watts

6 YEAR WARRANTY:

The UV SG650AT36 PRO has an international **6 Year Warranty** against all defects in materials and workmanship. Our Made in USA UV Tubes are guaranteed for **2 full years**.

UV TUBE LIFE EXPECTANCY AND COST:

Generally, 2 to 3 Years. The UV SG650AT has 1 ozone producing UV Tube inside.

MAINTENANCE:

Easy, Simple, and Minimal. Just replace the rear filter when dirty (usually every 3 - 4 months or so) and throw it away. It takes just 1 minute and you can do it yourself.