


UV SG7000T36 PROFESSIONAL PORTABLE UV OZONE GENERATOR

Professional UV Odour Removal, Air
and Surface Sanitising Unit
for Non-Occupied Spaces

Maximum Ozone Output: 7,000 mg/hr

Exclusively manufactured in Canada for
ProMedUSA Pte Ltd

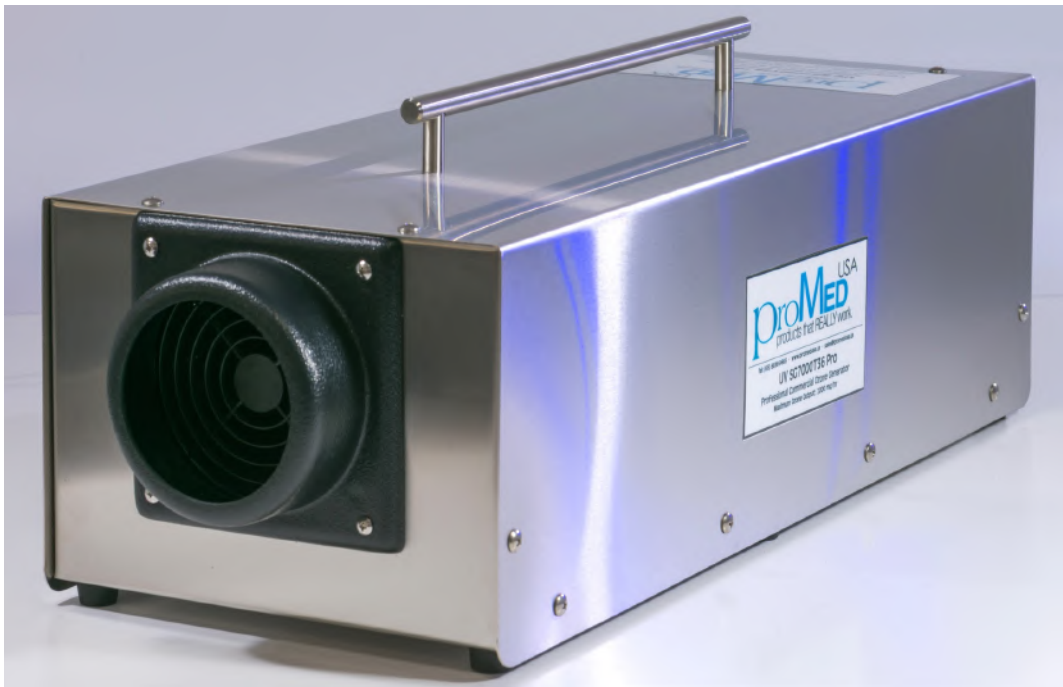

- **OZONE OUTPUT:** 1200 to 7000 MG/HR (ADJUSTABLE WITH REAR SWITCHES IN 6 OZONE LEVELS: 1200, 2400, 3600, 4800, 6400 and 7000 mg/hr)
- **DIMENSIONS:** 60 CM X 23 CM X 18 CM; **WEIGHT:** 11 KG
- **POWER:** 220-240VAC, 50Hz, 4 Amp
- **CONSTRUCTION:** 18 GAUGE BRUSHED 316 STAINLESS STEEL
- **UNIT WARRANTY:** 6 YEAR INTERNATIONAL WARRANTY
- **TUBE WARRANTY:** 2 YEAR WARRANTY ON THE MADE IN USA UV TUBES
- **PERFORMANCE:** EASILY REMOVE ODOURS IN A 775 M³ SPACE IN JUST 10-15 MINUTES; 29,000 M³ SPACE IN ABOUT 1-2 HOURS

Technical Details

OVERVIEW:

The ProMedUSA Model UV-SG7000 PRO Ozone Generator is designed for use as a very high output, commercial portable, odour removal and deodorisation tool. It is ideal for use in Bin Centres and Grease Trap Rooms, Hotel & Property Engineering Renovation Odour Removal, Mould Remediation, AHU's and HVAC's, Kitchen Exhaust Duct odour and Grease removal, Hospitals, Clinics, Medical Centres, Laboratories, Classrooms, Offices for air sanitization in non-occupied rooms.

USES:

Quickly destroy odours (including mould, mildew, tobacco, foods, body odours, perfume), disinfect and freshen the air from hotel rooms, clinics, residences, restaurants, public areas, automobiles, toilets, etc.

GENERATION METHOD:

High Output, High Efficiency, Ultra Long Life (2+ Years) American Made UV Tubes. Our UV Tubes are made exclusively for ProMedUSA

OZONE OUTPUT: 7,000 mg/hr adjustable with 3 switches on the rear panel.

TREATMENT AREA:

The UV SG7000 PRO can quickly freshen a 775 M³ space in less than 10 minutes; a 15,000 M³ space in about an hour; and a 29,000 M³ space in about 2 hours or less

DIMENSIONS:

61 cm long X 23 cm wide X 18 cm high; Weight is 11 kg

FEATURES:

The UV SG7000 Pro comes standard with a 9 position LED Electronic Timer (10 min, 30 min, 1,2,4,8,12,24 and 36 hours and 3 rear switches to adjust the ozone level

CONSTRUCTION:

The exterior case is beautiful brushed, rust proof, 18 gauge surgical grade stainless steel. Each UV SG-7000 PRO is built and designed to be virtually indestructible and last for years.

ELECTRICAL:

110-120VAC 60Hz, or 220-240V 50Hz, 500 watts maximum

6 YEAR WARRANTY:

The UV SG7000 PRO has an international **6 Year Warranty** against all defects in materials and workmanship. Our UV Tubes are guaranteed for **2 full years**.

UV TUBE LIFE EXPECTANCY :

Usually every 2 years or 15,000 hours

MAINTENANCE:

Easy, Simple, and Minimal. Just replace the rear filter when dirty (usually every 3 months or so) and throw it away. It takes just 1 minute and you can do it yourself.

ProMedUSA Pte Ltd • 111 North Bridge Road • #08-27 Peninsula Plaza • Singapore 179098
Tel: (65) 6836-9665 • www.promedusa.us • sales@promedusa.us

SINGAPORE • MALAYSIA • INDONESIA • BRUNEI • THAILAND • CAMBODIA • MYANMAR • VIETNAM • CHINA