



# ATLAS 30

WALLMOUNT

**AIR-COOLED**

# OZONE GENERATOR

**EXCLUSIVE DISTRIBUTOR**

**ProMedUSA Pte Ltd**

111 North Bridge Road ♦ #08-27 Peninsula Plaza ♦ Singapore 179098  
(65) 6836 9665 ♦ Sales@promedusa.us ♦ www.promedusa.us

# ATLAS 30C

LET'S PUT OZONE TO WORK  
FOR YOU


**EFFECTIVELY RELIABLY AND  
ECONOMICALLY**

---



## **Best Performance**

Unparalleled for Air-cooled

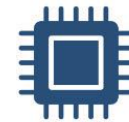

## **High-Quality Components**

5-year Warranty



## **Compact Design**

Easy to integrate



## **Smart**

Diagnostic & Control systems

# SMARTEST OZONE GENERATOR IN THE WORLD

## ADVANCED ON-BOARD PROTECTION & CONTROL SYSTEM

Introducing iOzone™, the cutting-edge operating system from Absolute Ozone®. Featuring a 5-inch LCD, this innovative system boasts state-of-the-art diagnostic and control systems to ensure uninterrupted 24/7 ozone production and minimize downtime.



### **iOzone™ diagnostics/control system**

Designed to protect against installation or usage issues like incorrect gas pressure, high ambient temperatures, flooded ozone cells, wiring/voltage problems and more.



### **LCD screen**

The LCD screen will allow touch to switch the generator on and off and to adjust the desired power.



### **Remote control**

The instrument comes with 4-20mA Remote Control Inputs, allowing for precise device control via external signals.



# DESIGN

## COMPACT AND EFFICIENT OZONE GENERATORS

- **Most compact in the Industry:**


ATLAS 30C - Absolute Ozone® Generators have dimensions of 14" x 15" x 7" Only! – saves valuable space and money on shipping.

- **Stacking Component:**

Absolute Ozone® generators have a stacking component for multiple units, allowing for desired ozone concentration and future expansion up to 5 kg/h or more.

- **Reversible Universal Mounting Flange:**

Our ozone generator has reversible mounting flanges, making it flexible for horizontal and vertical setups, optimizing accessibility in any industrial environment.

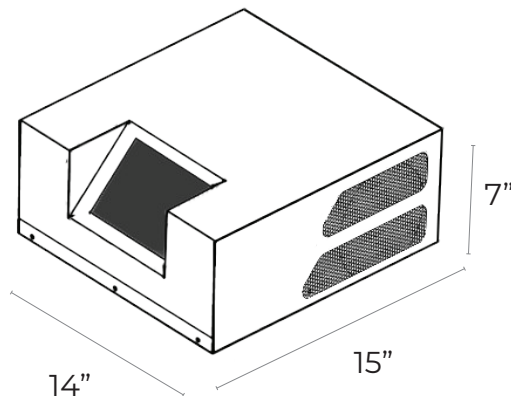

# HIGH-PERFORMANCE OZONE GENERATORS

## ABSOLUTE OZONE® GENERATORS WILL SAVE YOUR MONEY

- **5-Year Warranty**


Peace of mind with our 5-year warranty, plus a performance guarantee. Our reliable Absolute Ozone® generators save you money on repairs and downtime.

- **Technical Support**

Our technical assistance to our customers is complimentary, unlimited and absolutely free of charge.

- **Crafted for reliability and performance**

Exceptional reliability. Leak-proof design tested up to 150 PSIG, corrosion-resistant stainless steel enclosure, highest quality components.

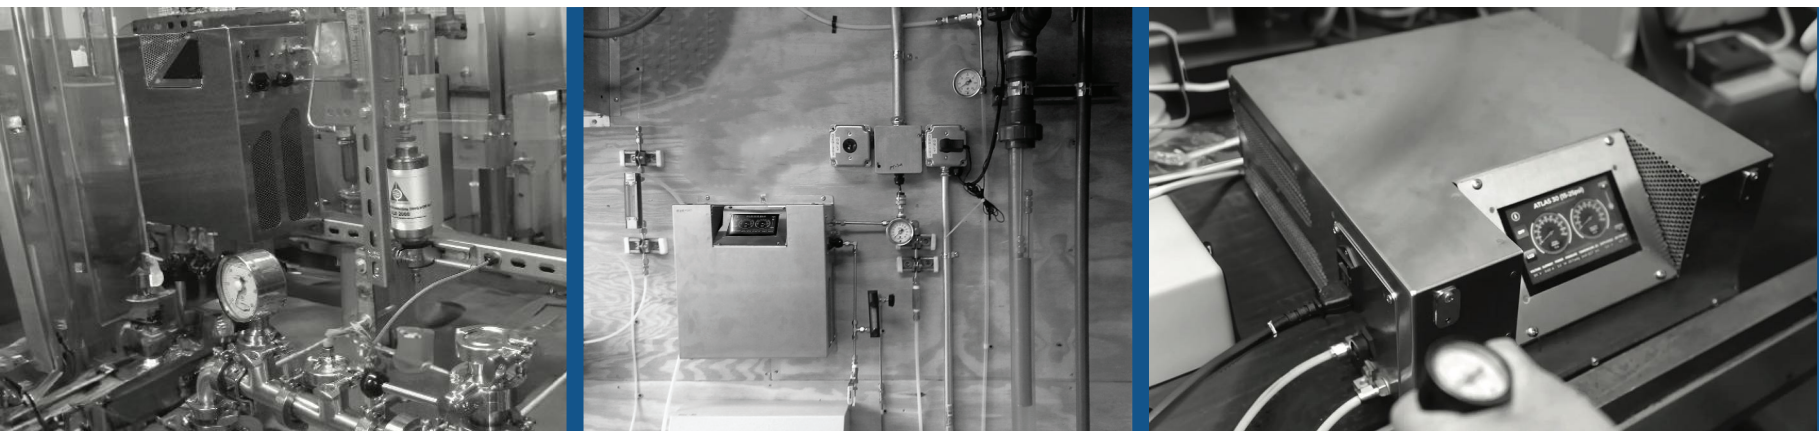

# UNPARALLELED PERFORMANCE

## EXPERIENCE UNBEATABLE AND GUARANTEED PERFORMANCE

Absolute Ozone® unbeatable ATLAS 30C ozone generator dissolves more ozone than any other, delivering superior disinfection rates.

Absolute Ozone® generators are the ultimate breakthrough in ozone technology. Their microfluidic platform design ensures precise and reliable delivery of ultra-pure and high-concentration ozone for a diverse range of applications.

The performance is unequaled in the industry, with the capability of reliably producing high concentration ozone up to 16% by weight.

| Oxygen Flow | Gas Press.<br>(PSIG) | Power<br>(%) | Ozone Conc.<br>(g/Nm <sup>3</sup> ) | Ozone Prod.<br>(g/h) | Ozone Conc.<br>(%w/w) |
|-------------|----------------------|--------------|-------------------------------------|----------------------|-----------------------|
| 0.5         | 20                   | 45%          | 248.0                               | 6.6                  | 16.4                  |
| 4.0         | 20                   | 100%         | 135.3                               | 29.3                 | 9.2                   |

\* Test was performed at 20°C, Generator was ON for more than 30 min.

Feel free to reach out to us and we'll be happy to provide you with a detail performance chart for your information

# SPECIFICATIONS

|                                       |                                                                                                         |
|---------------------------------------|---------------------------------------------------------------------------------------------------------|
| Ozone (O <sub>3</sub> ) Production:   | 30 g/h                                                                                                  |
| Working Pressure:                     | 20 PSIG                                                                                                 |
| Concentration:                        | 16% by weight Guaranteed                                                                                |
| Feed Gas (O <sub>2</sub> ) Flow Rate: | 0.1-4 SLPM                                                                                              |
| Dimensions:                           | 14 x 15 x 7 inches (WxDxH)                                                                              |
| Weight:                               | 35 lbs.                                                                                                 |
| Control Power Requirements:           | 120 V ~ +/-10%, 50/60 Hz, Single Phase, 5.6 A<br>220 V ~ +/-10%, 50/60 Hz, Single Phase, 3.0 A          |
| Maximum Power Consumption:            | 500W                                                                                                    |
| Remote Control:                       | 4-20mA Remote Control Inputs                                                                            |
| Physical Connections:                 | O <sub>2</sub> Inlet: 0.25" SS316 Comp. Connector<br>O <sub>3</sub> Outlet: 0.25" SS316 Comp. Connector |




\*Typical Installation of the  
Absolute Ozone® ATLAS 30C

# OUR CUSTOMERS

## JUST A FEW OF THE MAJOR BRANDS & COMPANIES THAT RELY ON ABSOLUTE OZONE GENERATORS

For the past three decades, we have consistently delivered reliable and highly efficient ozone generators to our valued clients. These systems have not only proven instrumental in their operations but have also led to substantial cost savings.




Absolute Ozone®, a leader in ozone generation technology since 1985, supplies top-tier ozone generators to 100+ countries worldwide.

Over three decades, we have focused on ensuring client project success through reliable, economical, and effective ozone generators.

We offer a unique opportunity to our customers by providing the most advanced Absolute Ozone generators, guaranteeing equipment effectiveness, project success, and substantial cost savings.

Our unlimited, complimentary technical assistance is a cornerstone of our commitment to customer support.



**EXCLUSIVE DISTRIBUTOR**

111 North Bridge Road ♦ #08-27 Peninsula Plaza ♦ Singapore 179098  
(65) 6836 9665 ♦ Sales@promedusa.us ♦ www.promedusa.us

# Get In Touch



## Message Us

Sales@promedusa.us



## Address

111 North Bridge Road  
#08-27 Peninsula Plaza  
Singapore 179098



## Customer Service

+65 6836 9665

For more information, please visit our website, Or please feel free to give us a call