



NANO

BENCHMOUNT | WALLMOUNT

AIR-COOLED

OZONE GENERATOR

EXCLUSIVE DISTRIBUTOR

ProMedUSA Pte Ltd

111 North Bridge Road ♦ #08-27 Peninsula Plaza ♦ Singapore 179098
(65) 6836 9665 ♦ Sales@promedusa.us ♦ www.promedusa.us

NANO 15

AIR-COOLED OZONE GENERATOR


LET'S PUT OZONE TO WORK FOR YOU

**EFFECTIVELY RELIABLY AND
ECONOMICALLY**



Best Performance

Unparalleled for Air-cooled

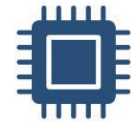

High-Quality Components

5-year Warranty



Compact Design

Easy to integrate



Smart

Diagnostic & Control systems

SMARTTEST OZONE GENERATOR IN THE WORLD

ADVANCED ON-BOARD PROTECTION & CONTROL SYSTEM

Introducing iOzone™, the cutting-edge operating system from Absolute Ozone®. Featuring a 5-inch LCD, this innovative system boasts state-of-the-art diagnostic and control systems to ensure uninterrupted 24/7 ozone production and minimize downtime.



iOzone™ diagnostics/control system

Designed to protect against installation or usage issues like incorrect gas pressure, high ambient temperatures, flooded ozone cells, wiring/voltage problems and more.



LCD screen

The LCD screen will allow touch to switch the generator on and off and to adjust the desired power.



Remote control

The instrument comes with 4-20mA Remote Control Inputs, allowing for precise device control via external signals.



DESIGN

COMPACT AND EFFICIENT OZONE GENERATORS

- **Most compact in the Industry:**


NANO - Absolute Ozone® Generators produce up to 10 g/h of ozone have dimensions of 5.25" x 5" x 15.5" Only! – saves valuable space and money on shipping.

- **Revolutionizing Small-Scale Ozone Generation:**

The Absolute Ozone | Ozone Generators Nano 15 model is a versatile and powerful ozone generator that is perfect for small-scale projects such as laboratory or university research, as well as water and air treatment applications.

- **Versatile Innovation:**

This compact and lightweight device is designed for easy use and is ideal for pilot testing in industrial and research settings where space is limited. Its intuitive interface makes it simple to set up, ensuring that you can quickly get started on your project in minutes.

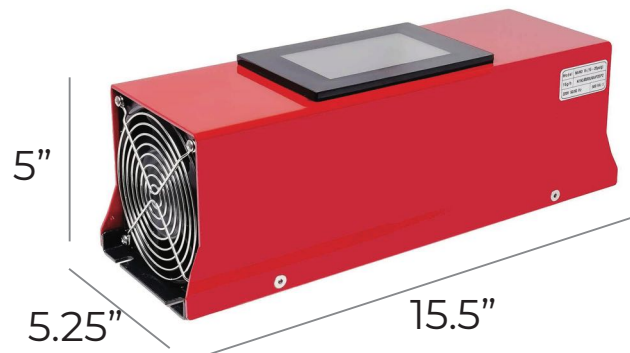

HIGH-PERFORMANCE OZONE GENERATORS

ABSOLUTE OZONE® GENERATORS WILL SAVE YOUR MONEY

- **5-Year Warranty**

Peace of mind with our 5-year warranty, plus a performance guarantee. Our reliable Absolute Ozone® generators save you money on repairs and downtime.

- **Technical Support**

Our technical assistance to our customers is complimentary, unlimited and absolutely free of charge.

- **Crafted for reliability and performance**

Exceptional reliability. Leak-proof design tested up to 150 PSIG, corrosion-resistant stainless steel enclosure, highest quality components.



*Typical Installation of the
Absolute Ozone® NAN015

UNPARALLELED PERFORMANCE

EXPERIENCE UNBEATABLE AND GUARANTEED PERFORMANCE

Absolute Ozone® unbeatable NANO15 ozone generator dissolves more ozone than any other, delivering superior disinfection rates.

Absolute Ozone® generators are the ultimate breakthrough in ozone technology. Their microfluidic platform design ensures precise and reliable delivery of ultra-pure and high-concentration ozone for a diverse range of applications.

The performance is unequalled in the industry, with the capability of reliably producing high concentration ozone up to 10% by weight.

Oxygen Flow	Gas Press. (PSIG)	Power (%)	Ozone Conc. (g/Nm ³)	Ozone Prod. (g/h)	Ozone Conc. (%w/w)
0.3	20	45%	177.4	4.8	11.9
3.0	20	100%	98.0	16.1	6.7

* Test was performed at 20°C, Generator was ON for more than 30 min.

Feel free to reach out to us and we'll be happy to provide you with a detail performance chart for your information

SPECIFICATIONS

Ozone (O ₃) Production:	15 g/h
Working Pressure:	20 PSIG
Concentration:	5-10% by weight
Feed Gas (O ₂) Flow Rate:	0.1-4 SLPM
Dimensions:	5 x 5.25 x 15.5 inches (WxHxD)
Weight:	35 lbs.
Control Power Requirements:	120 V ~ +/-10%, 50/60 Hz, Single Phase, 2.6 A 220 V ~ +/-10%, 50/60 Hz, Single Phase, 1.4 A
Maximum Power Consumption:	200W
Remote Control:	4-20mA Remote Control Inputs
Physical Connections:	O ₂ Inlet: 0.25" SS316 Comp. Connector O ₃ Outlet: 0.25" SS316 Comp. Connector




*Typical Installation of the
Absolute Ozone® NANO 15

OUR CUSTOMERS

JUST A FEW OF THE MAJOR BRANDS & COMPANIES THAT RELY ON ABSOLUTE OZONE GENERATORS

For the past three decades, we have consistently delivered reliable and highly efficient ozone generators to our valued clients. These systems have not only proven instrumental in their operations but have also led to substantial cost savings.




Absolute Ozone®, a leader in ozone generation technology since 1985, supplies top-tier ozone generators to 100+ countries worldwide.

Over three decades, we have focused on ensuring client project success through reliable, economical, and effective ozone generators.

We offer a unique opportunity to our customers by providing the most advanced Absolute Ozone generators, guaranteeing equipment effectiveness, project success, and substantial cost savings.

Our unlimited, complimentary technical assistance is a cornerstone of our commitment to customer support.



EXCLUSIVE DISTRIBUTOR

111 North Bridge Road ♦ #08-27 Peninsula Plaza ♦ Singapore 179098
(65) 6836 9665 ♦ Sales@promedusa.us ♦ www.promedusa.us

Get In Touch



Message Us

Sales@promedusa.us



Address

111 North Bridge Road
#08-27 Peninsula Plaza
Singapore 179098



Customer Service

+65 6836 9665

For more information, please visit our website, Or please feel free to give us a call